

Figure 1

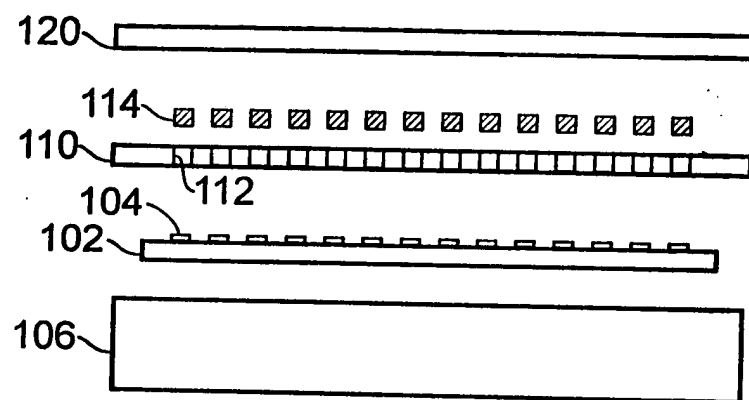


Figure 1A

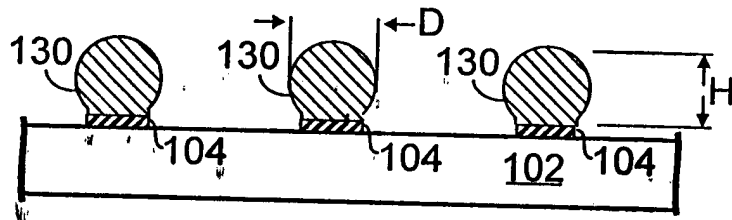


Figure 1B

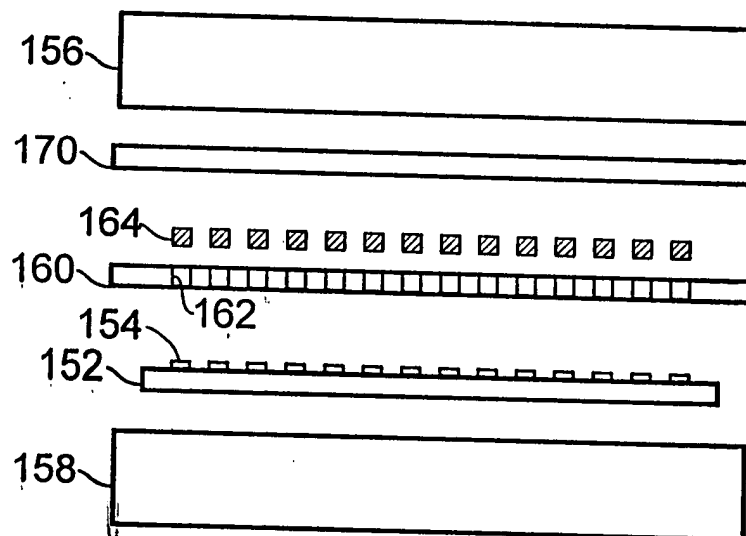


Figure 2A









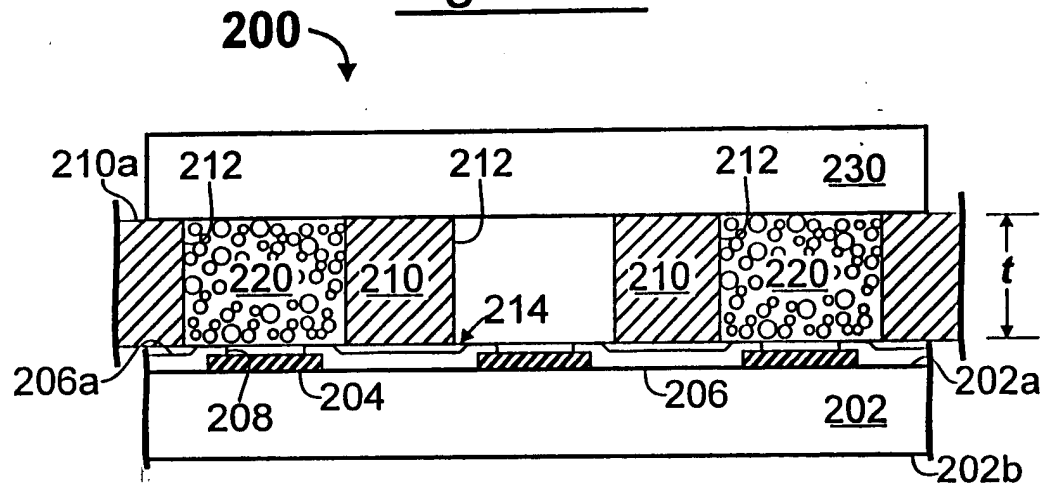


Figure 2B

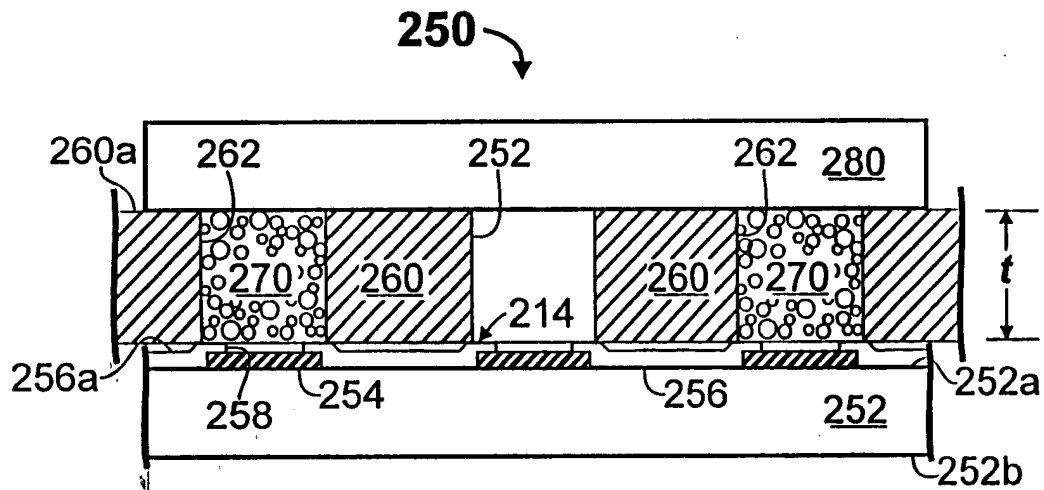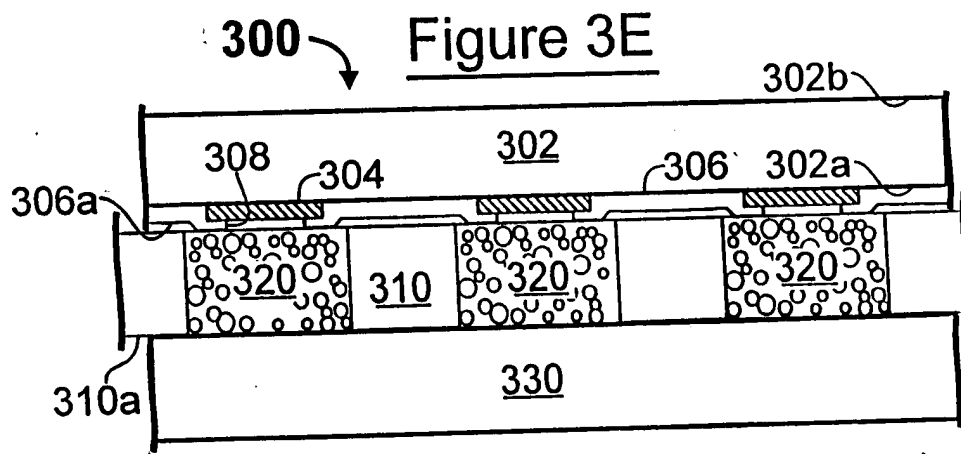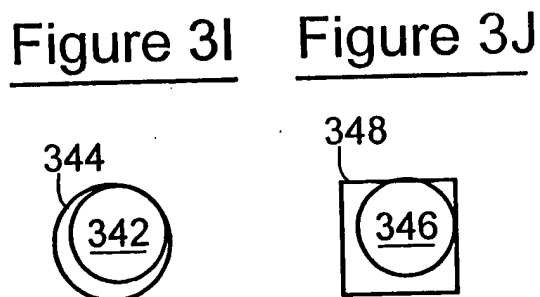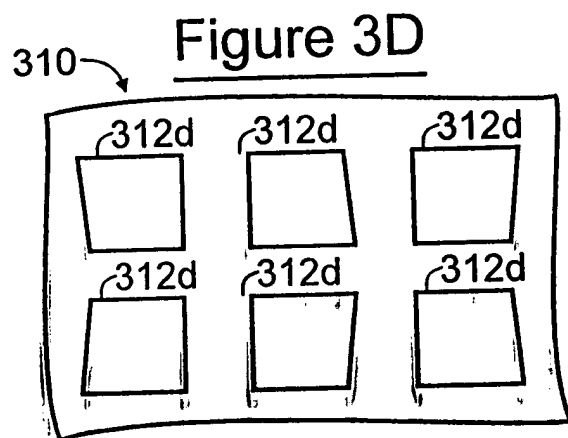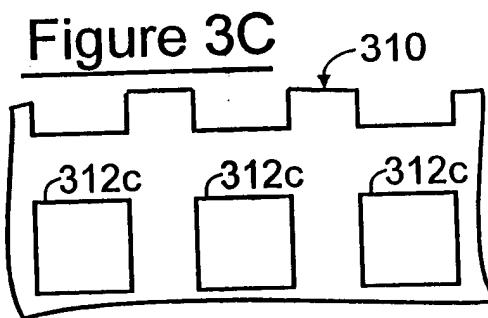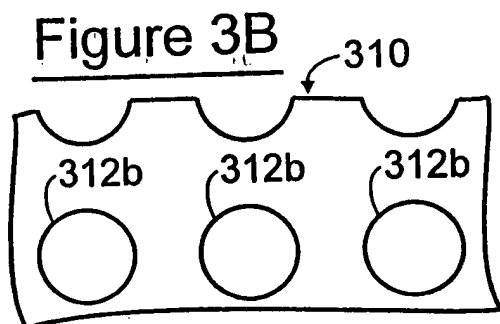


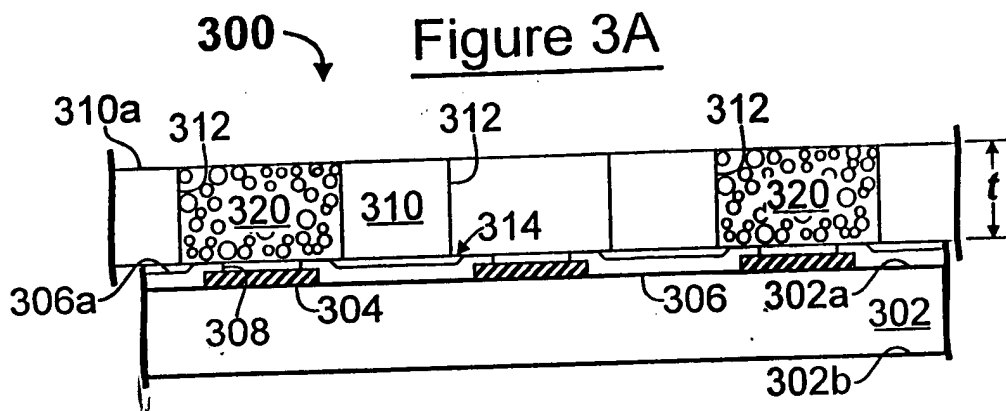


300 Figure 3F

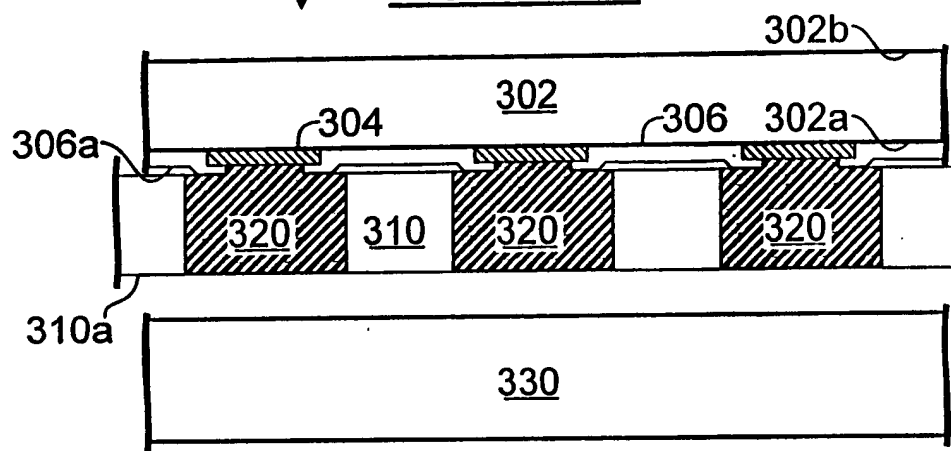


300 Figure 3G

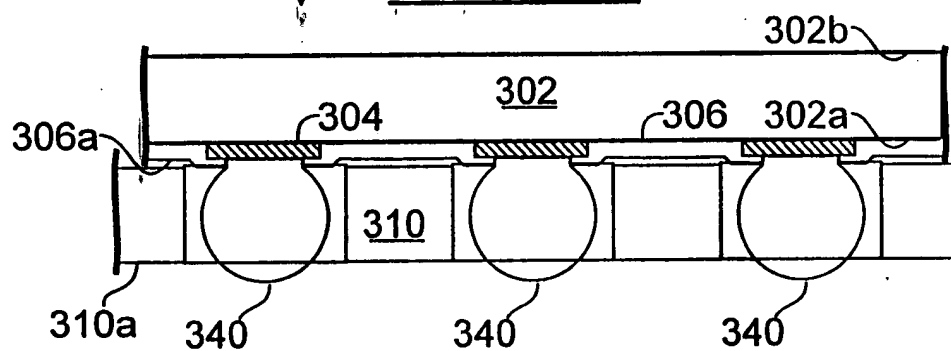


300 Figure 3H

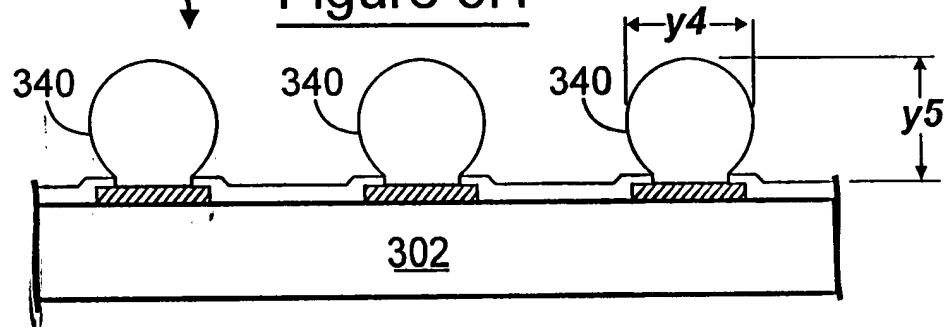


400 → Figure 4

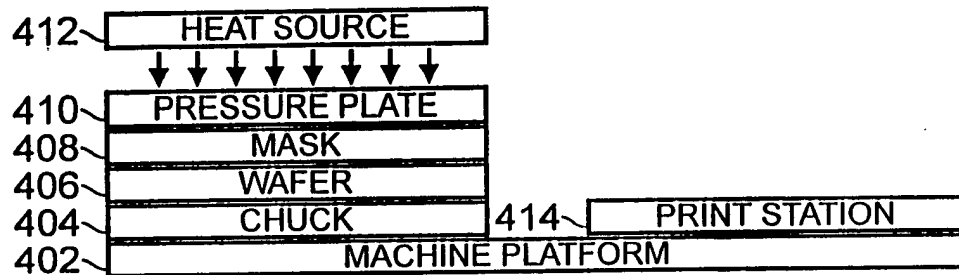

420 → Figure 4A

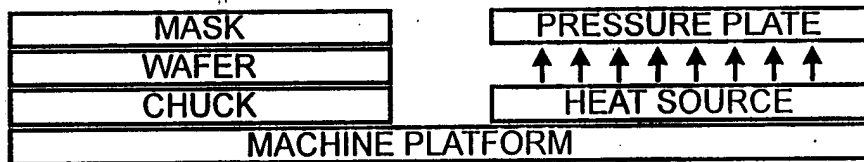

420 → Figure 4B

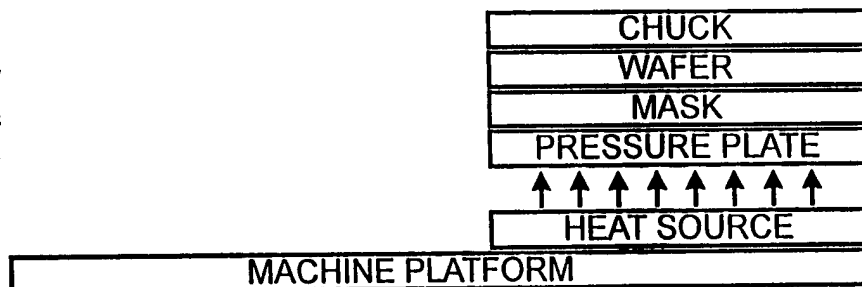

440 Figure 4C

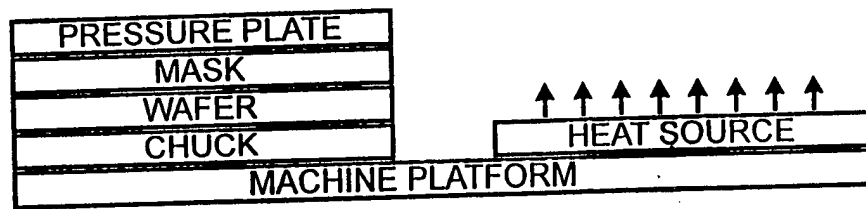


Figure 4D

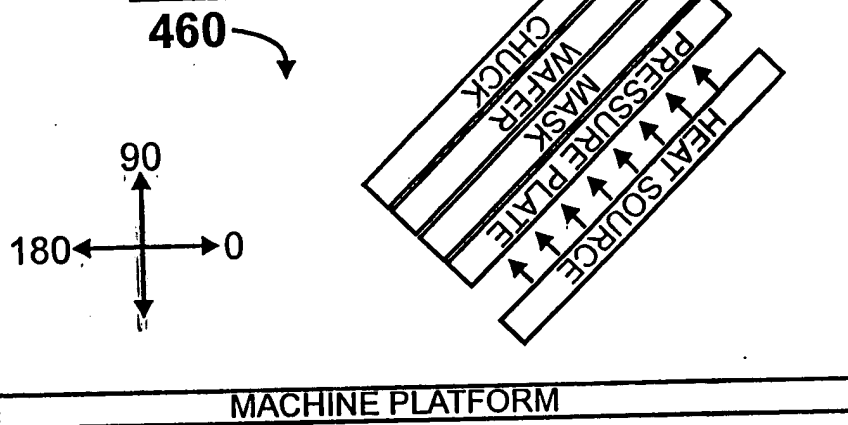


Figure 4E

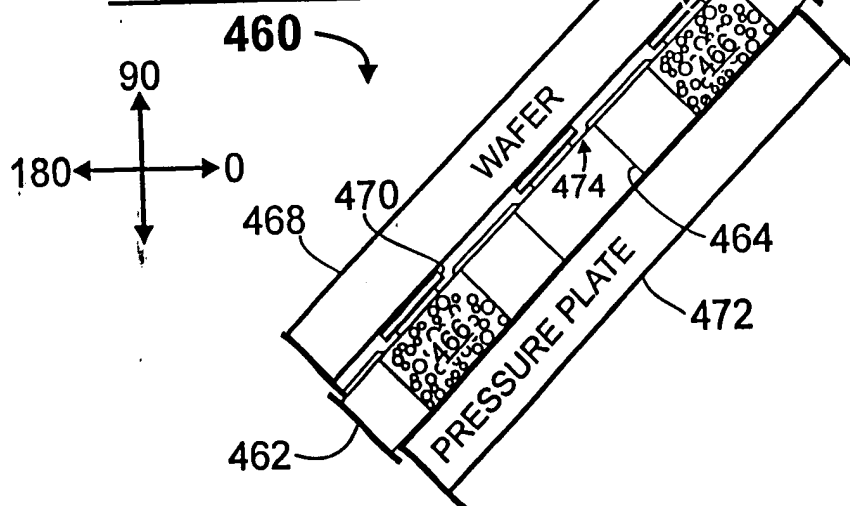


Figure 5A

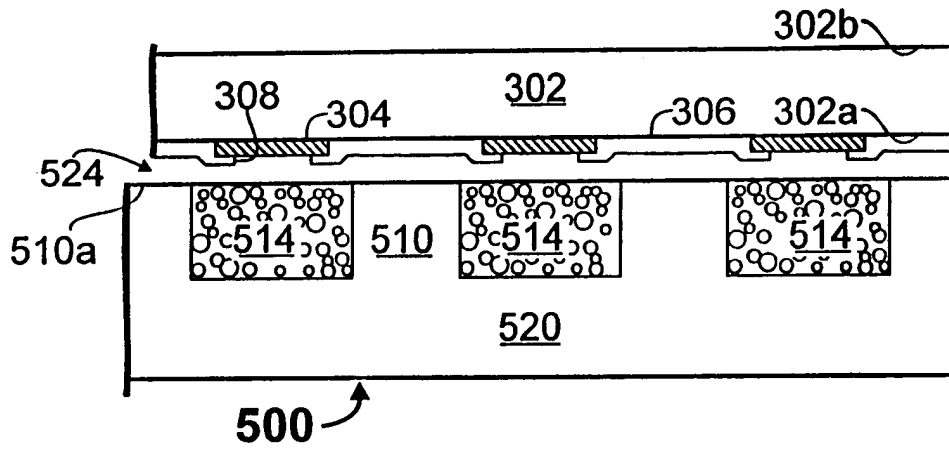


Figure 5B

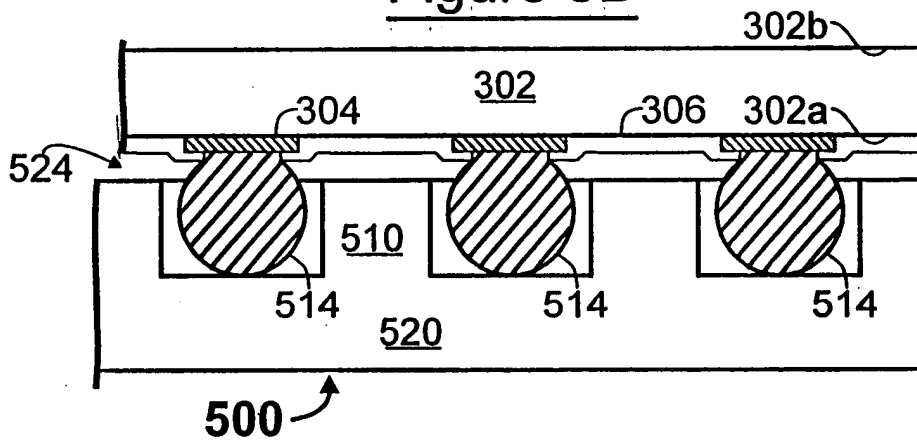


Figure 5C

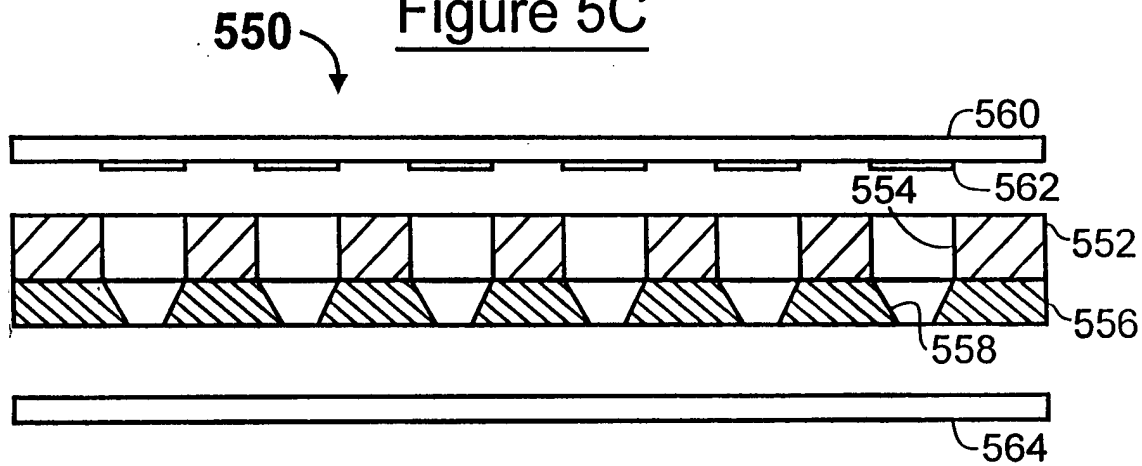


Figure 6A

Step 1
bump

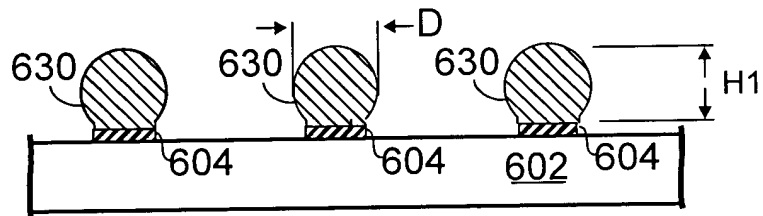


Figure 6B

Step 2
encapsulate
(overmold)

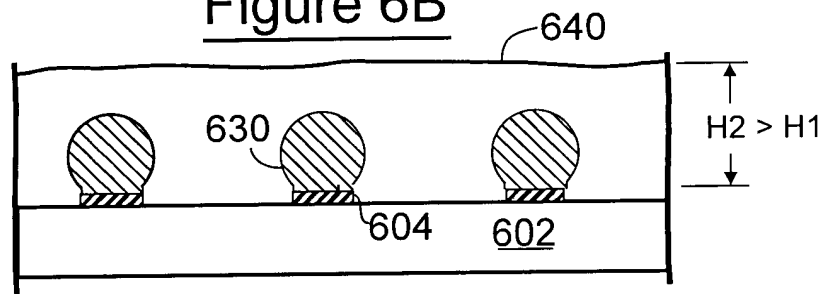


Figure 6C

Step 3
lap

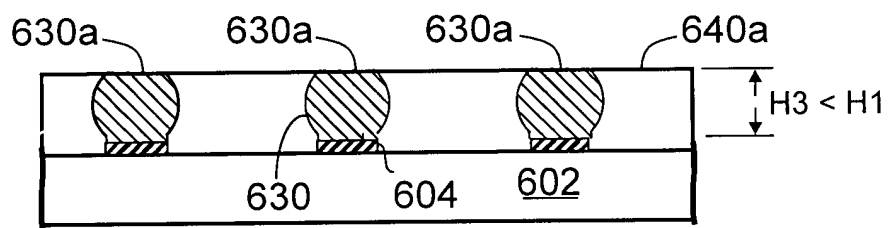


Figure 6D

Step 4
bump, again

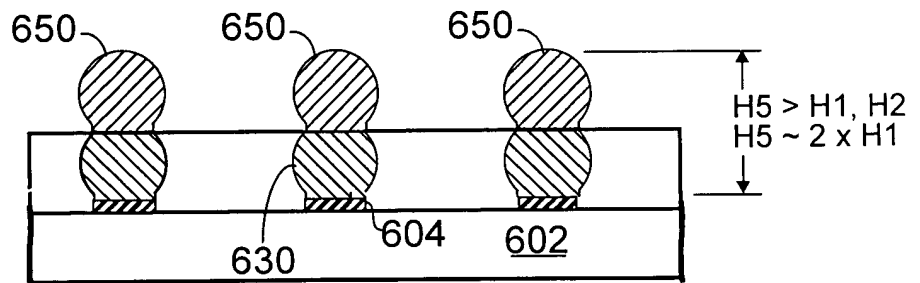


Figure 7B

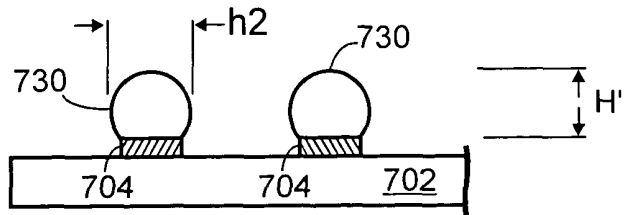


Figure 7C

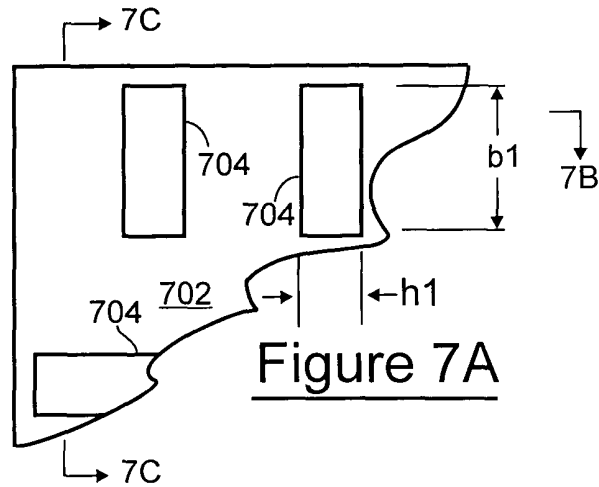
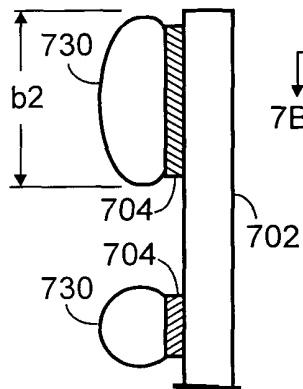


Figure 7A

Figure 1D

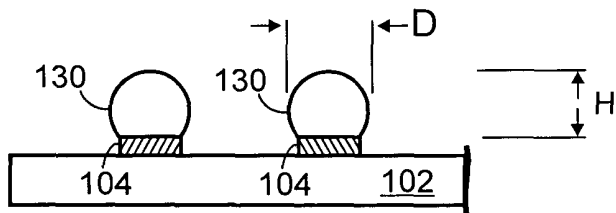


Figure 1E

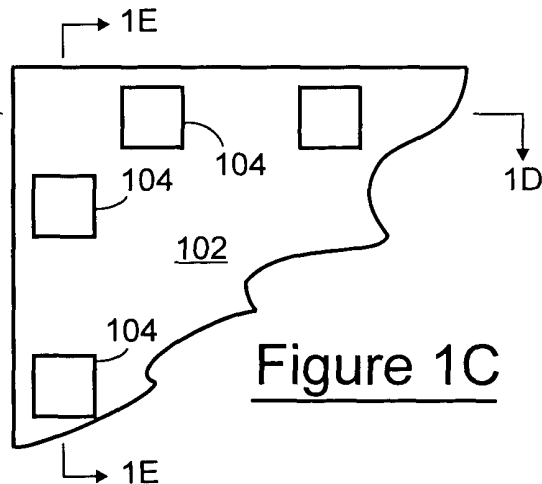
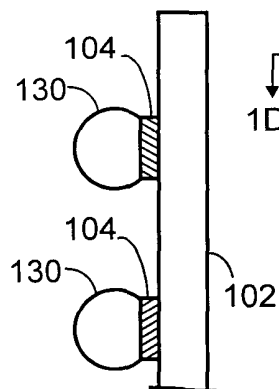


Figure 1C

Figure 7E

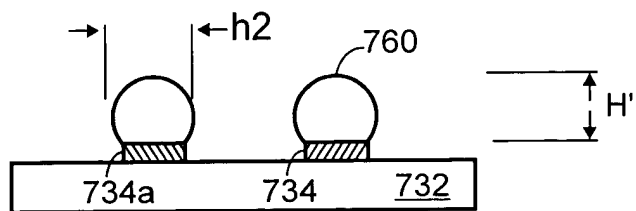


Figure 7F

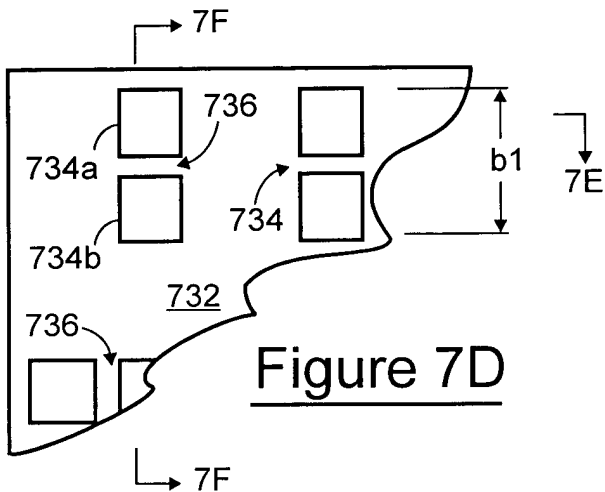
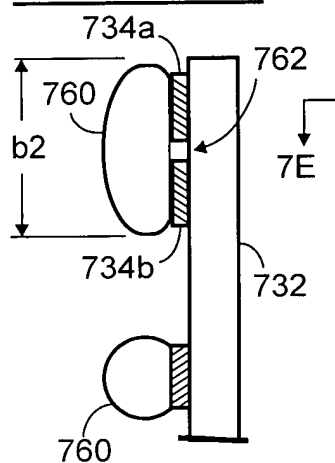


Figure 7D

Figure 7H

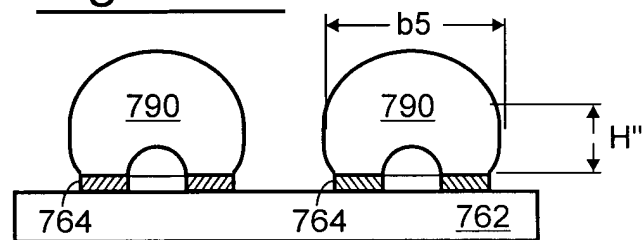


Figure 7I

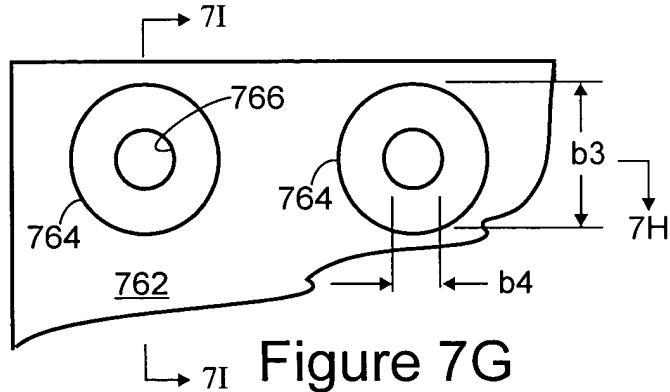
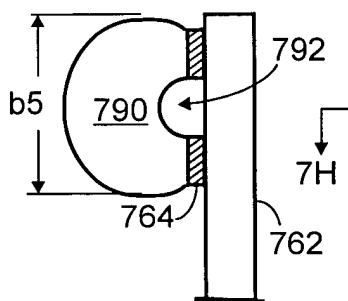


Figure 7G

Figure 8A


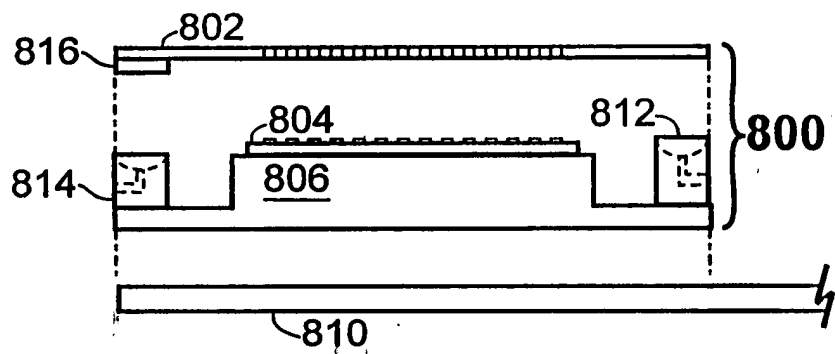


Figure 8B

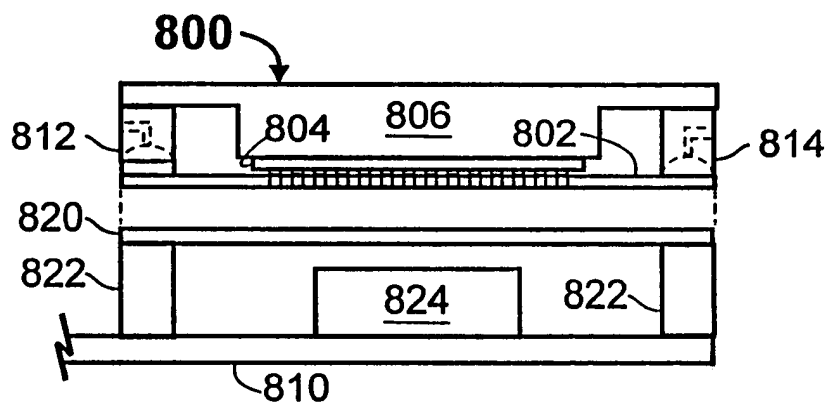

900 Figure 9

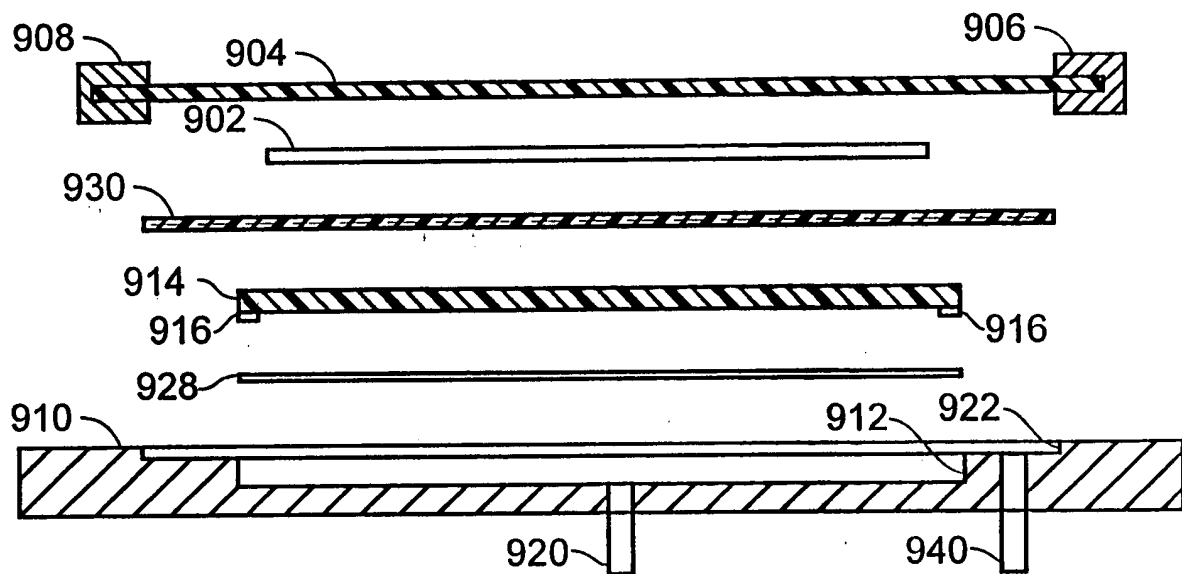
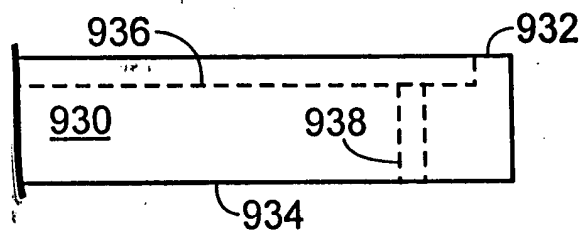


Figure 9A



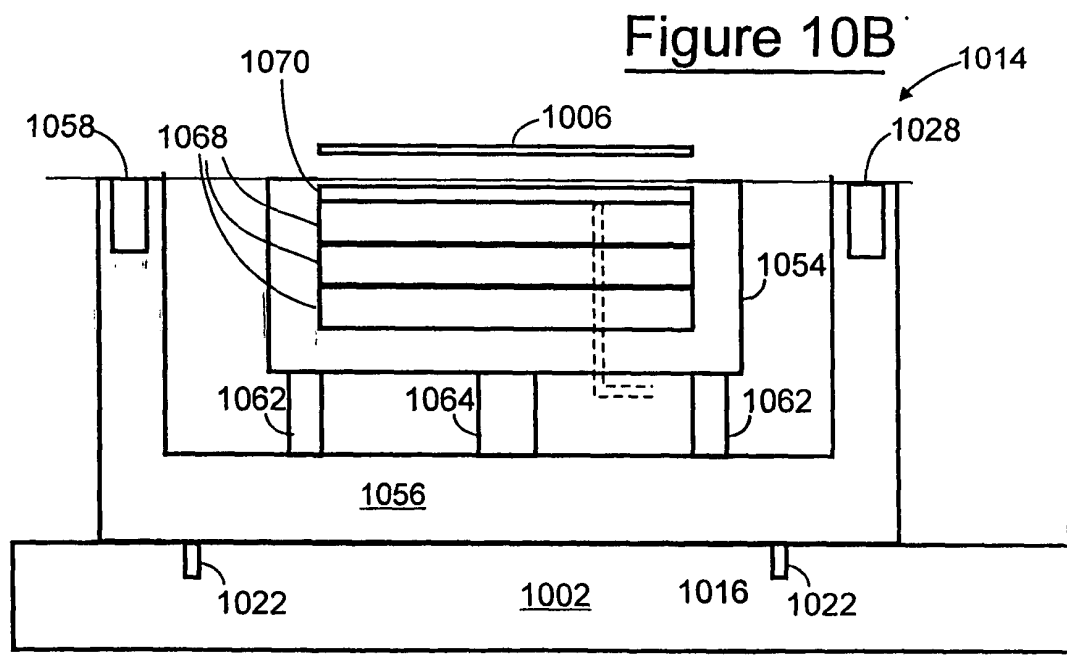
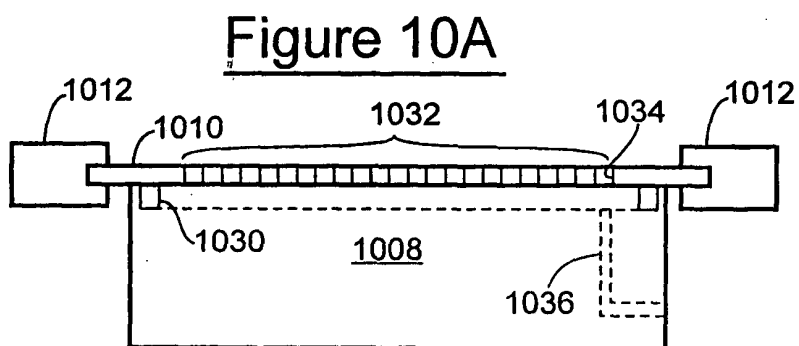
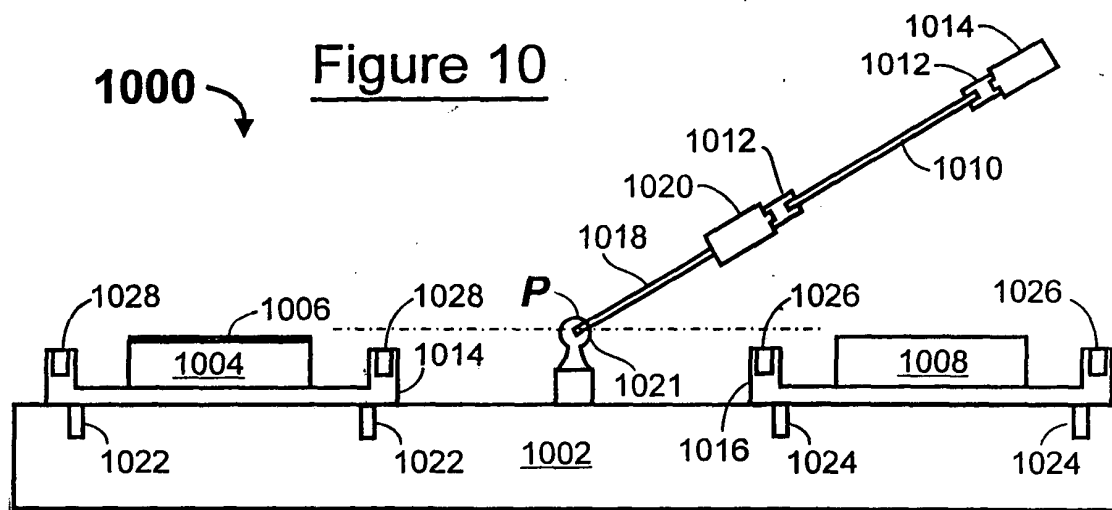


FIGURE 10C

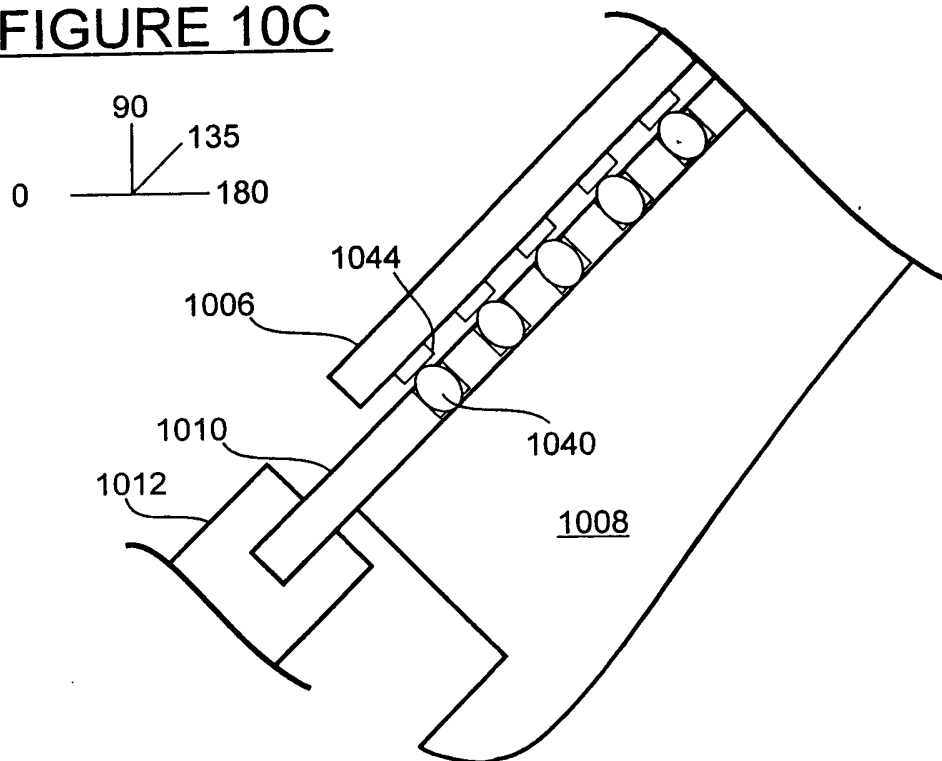


FIGURE 10D

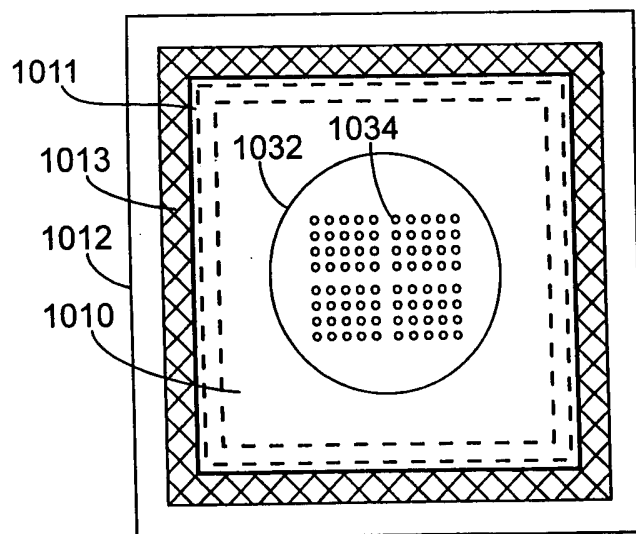


Figure 11A

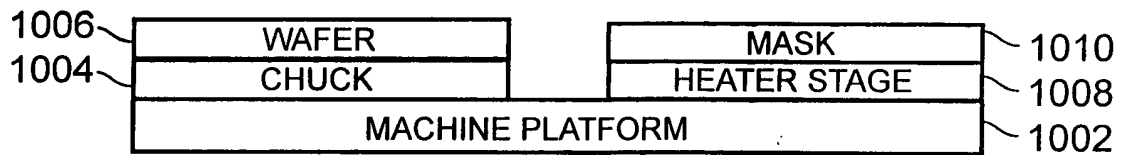


Figure 11B

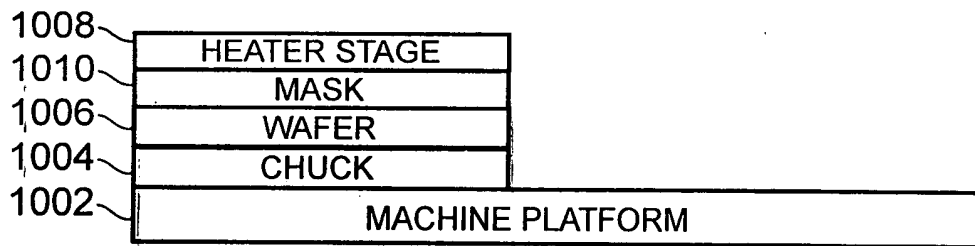


Figure 11C

